iPad Mini 3 Wi-Fi Antenna Cable Tape Replacement

Prereq to peel up the antenna cable tape.

Written By: Sam Lionheart




INTRODUCTION


Prereq only.

TOOLS:

- Spudger (1)


Step 1 — Antenna Cable Tape

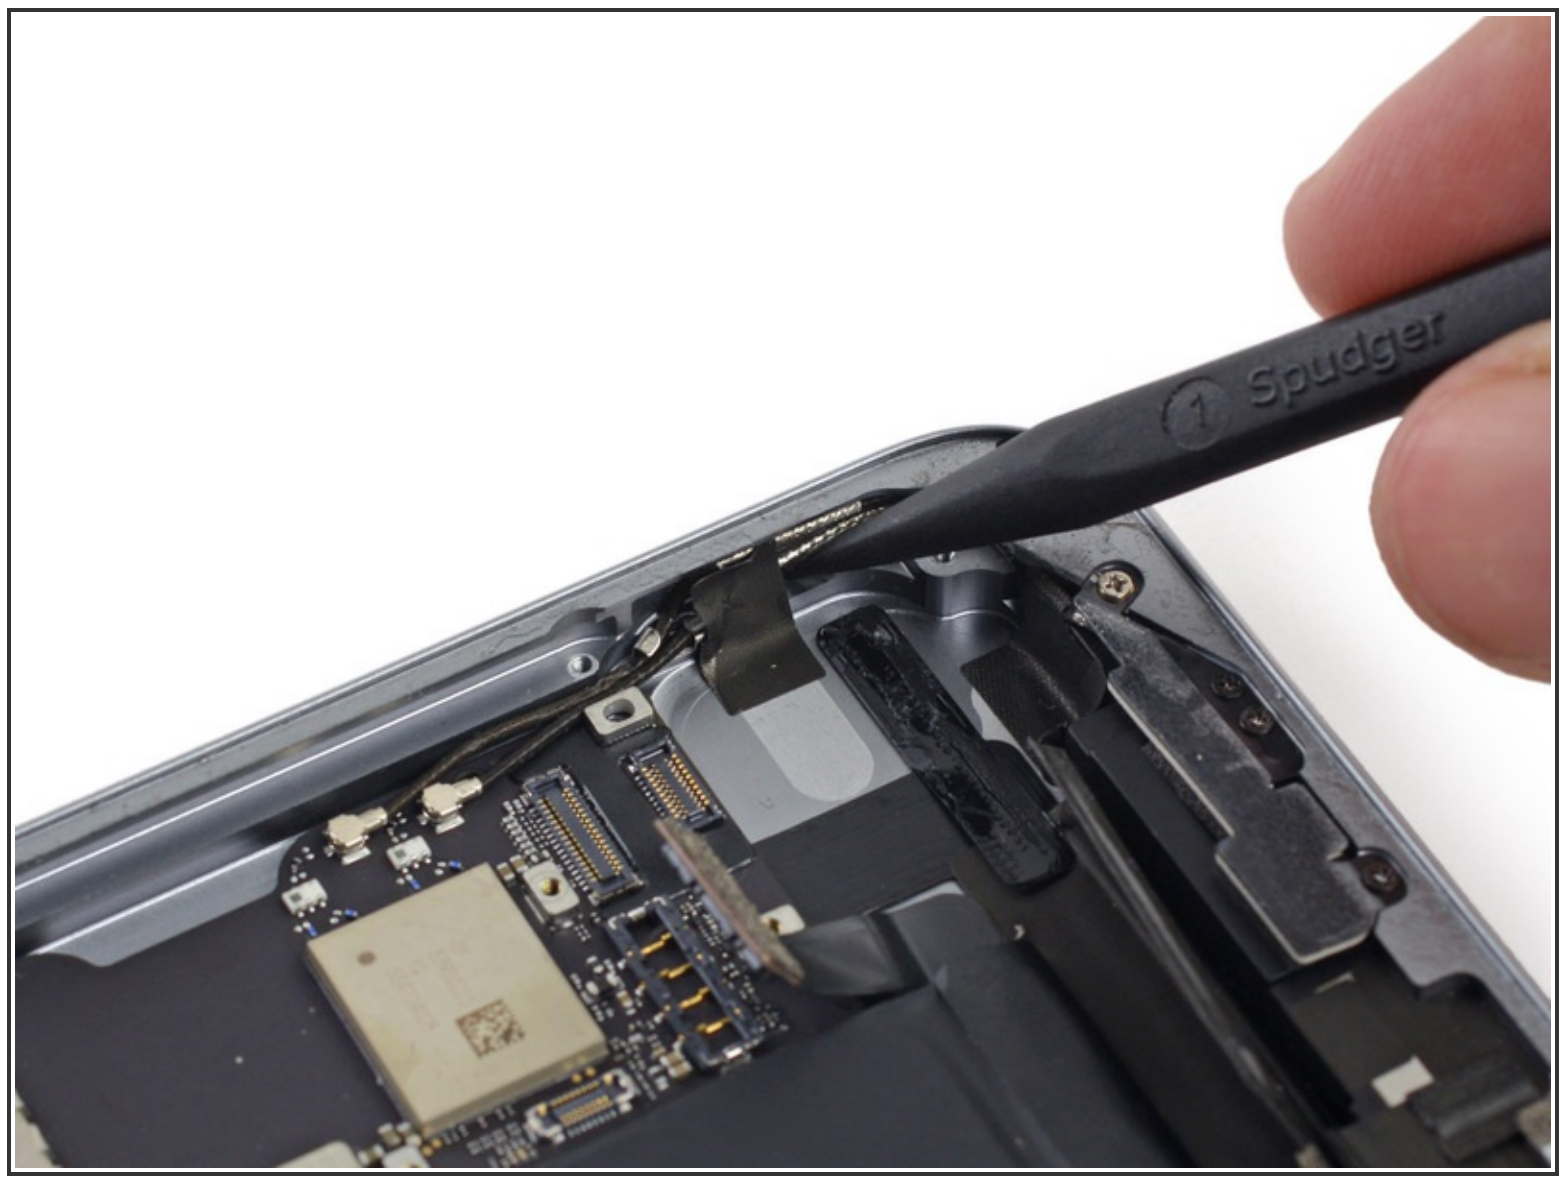

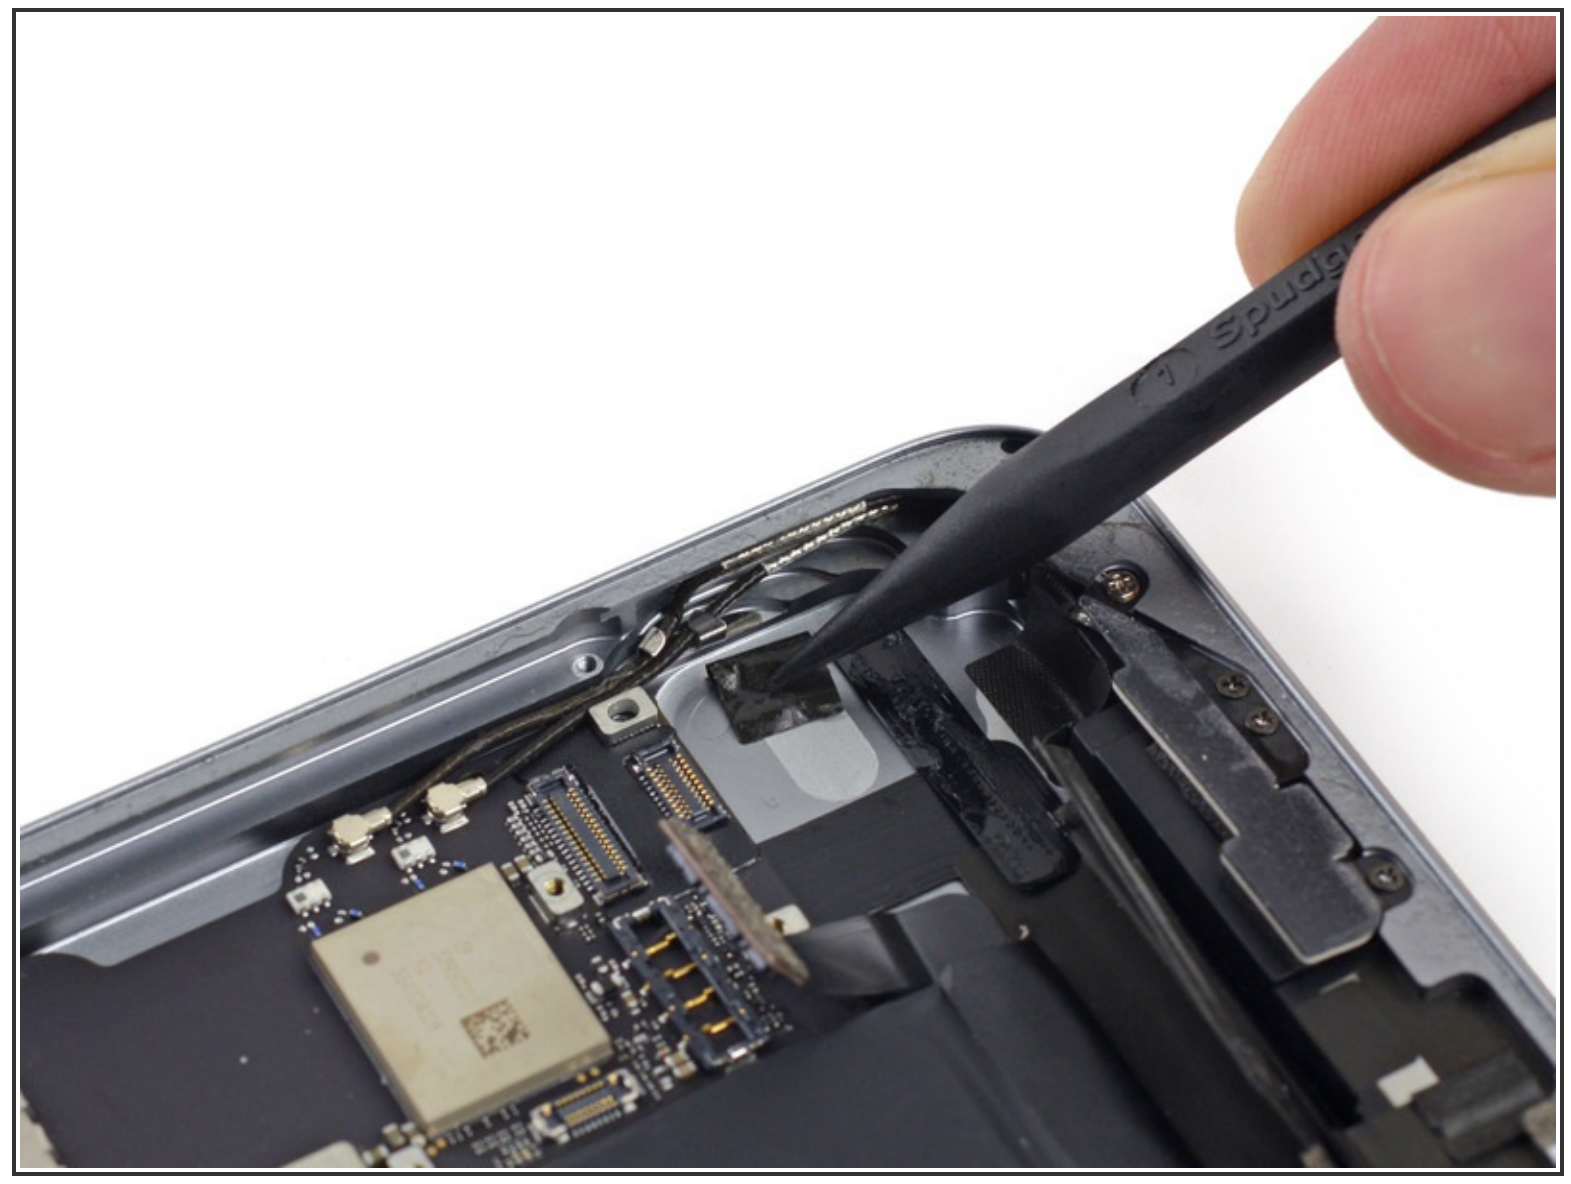

- Use the tip of a spudger to peel the tape off of the antenna cables near the logic board.

Step 2

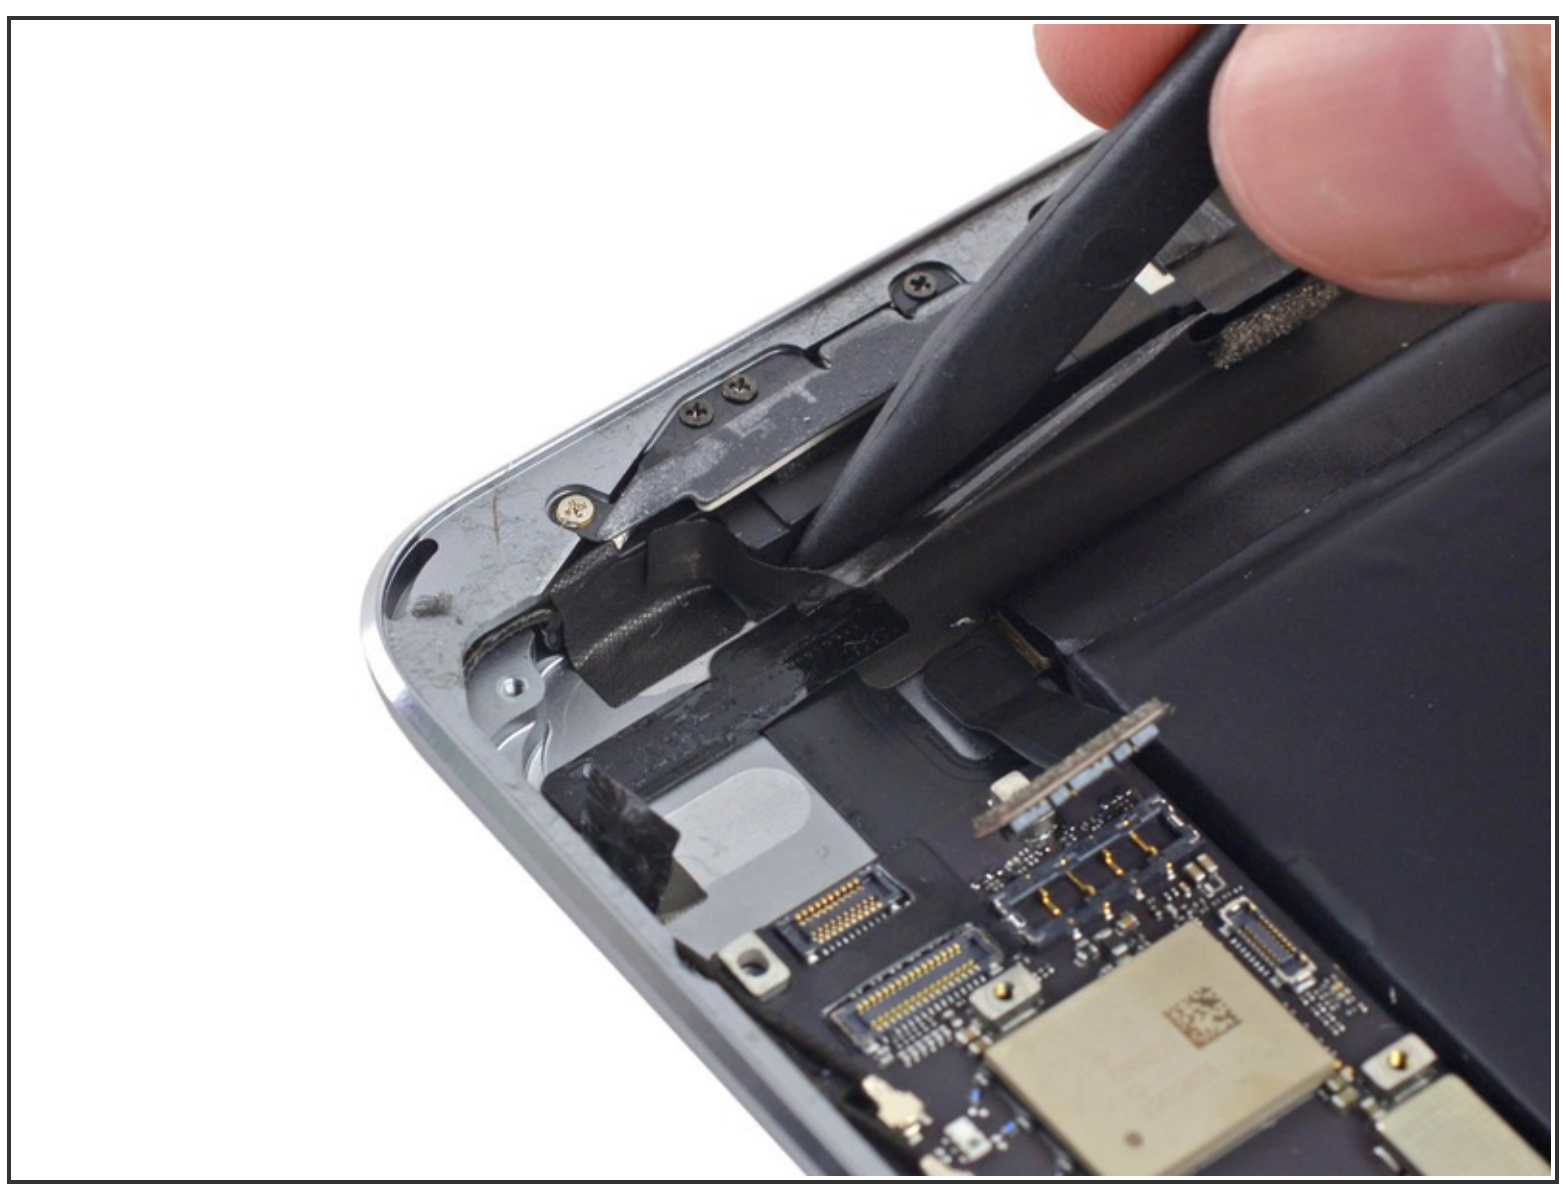



- Use the point of a spudger to separate the adhesive holding the antennas to the right speaker.

Step 3





- Use the point of a spudger to lift the antenna cable adhesive up off the rear case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 06:53:57 PM.